


JVC

CD PORTABLE SYSTEM

RC-EZ35S

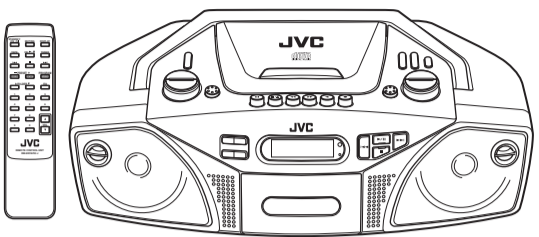

For Customer Use:

Enter below the Model No. and Serial No. which are located either on the rear, bottom or side of the cabinet. Retain this information for future reference.

Model No. _____

Serial No. _____

COMPACT disc DIGITAL AUDIO

MP3 PLAYBACK



INSTRUCTIONS

601-EZ3500-010
LVT1527-001C [J/C]

Thank you for purchasing this JVC product.



Please read these instructions carefully before starting operation to be sure to obtain optimum performance and a longer service life from the unit.

SAFETY PRECAUTIONS



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

DO NOT EXPOSE TO RAIN OR MOISTURE
NE PAS EXPOSER À LA PLUIE NI À L'HUMIDITÉ
ATTENTION: RISQUE DE CHOC ÉLECTRIQUE, NE PAS OUVRIR



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

For U.S.A.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

CAUTION


Changes or modification not approved by JVC could void the user's authority to operate this equipment.

 
For Canada:

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

Caution —  STANDBY/ON switch!

Disconnect the mains plug to shut the power off completely. The  STANDBY/ON switch in any position does not disconnect the mains line. The power can be remote controlled.

CAUTION

To reduce the risk of electrical shocks, fire, etc.:
1. Do not remove screws, covers or cabinet.
2. Do not expose this appliance to rain or moisture.
3. To disconnect power from the mains, pull out the mains plug.
When installing the product, ensure that the plug is easily accessible.

IMPORTANT FOR LASER PRODUCTS

1. CLASS 1 LASER PRODUCT
2. **CAUTION:** Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
3. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the Unit; leave all servicing to qualified service personnel.

FIRST THINGS

This portable system operates on battery or AC power.

FM telescopic antenna

BEAT CUT

Battery compartment

PHONES jack

AC outlet

Supplied power cord

INSERTING BATTERIES


1 **Open the battery compartment cover.**
Pull the battery compartment cover toward you while pressing the sections marked by the arrows.

2 **Insert eight R20 (SUM-1)/D (13D)-size batteries. (not supplied)**
Be sure to insert the batteries with the (+) and (–) terminals positioned correctly.

3 **Replace the battery compartment cover.**

Inserting Batteries into the Remote Control Unit:

Match the polarity (+ and –) of the batteries. R03 (UM–4)/AAA (24F)×2 (not supplied)

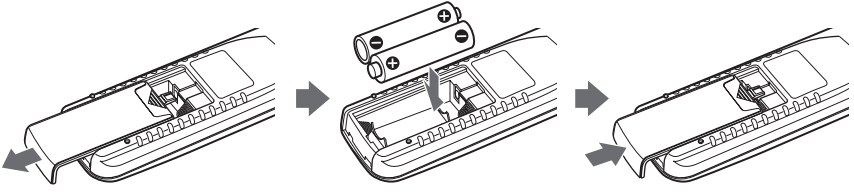

Note: The battery power will be switched off when you plug the power cord into the AC IN ~ jack on the unit.

CAUTION:

To avoid battery leakage or explosion, handle batteries properly.

- If you are not going to use your system for a month or more, remove the batteries from the battery compartment.
- Dispose of batteries in the proper manner, according to federal, state, and local regulations.
- Do not mix with different battery types or with new and old ones, or do not attempt to charge a battery not intended to be recharged.
- Discard leaky batteries immediately. Leaking batteries can cause skin burns or other personal injury.

SUPPLRYING AC POWER

Plug the power cord into the AC IN ~ jack on the back of the unit, and into an AC power outlet.
Note: To switch off the system completely, unplug the power cord.

CAUTIONS:
1. **ONLY USE JVC POWER CORD PROVIDED WITH THIS UNIT TO AVOID MALFUNCTION OR DAMAGE TO THE UNIT. REMOVE BATTERIES WHEN USING THE POWER CORD.**
2. **BE SURE TO UNPLUG THE POWER CORD FROM THE OUTLET WHEN GOING OUT OR WHEN THE UNIT IS NOT IN USE FOR AN EXTENDED PERIOD OF TIME.**

USING HEADPHONES


Connect commercially available headphones to the PHONES jack on the rear of the main unit. While the headphones are connected, the speakers do not produce any sound. Before connecting the headphones, make sure to turn down the sound volume.

 
 

 



ANTENNAS


 
 
 
The AM antenna is built in, so adjusting the position of the unit may help AM reception. The FM telescopic antenna on the back of the unit can be extended and rotated for better FM reception.

NAMES OF PARTS AND CONTROLS

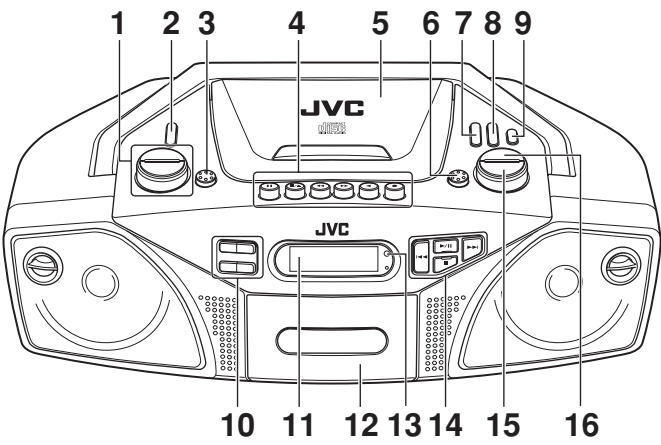
Top and front sides:
Main unit









1 VOLUME UP/DOWN buttons
2 STANDBY/ON  button
3 HBS button
4 Tape operation buttons
PAUSE  button
STOP/EJECT  button
FF  button
REW  button
PLAY  button
REC  button
5 Disc door
6 PRESET EQ button
7 PROGRAM/CLOCK SET button

 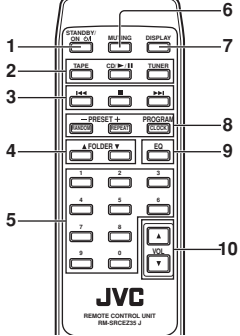8 PRESET UP/REPEAT button
9 FM MODE button
10 RANDOM button
DISPLAY button
FOLDER – button
FOLDER + button
11 Display window
12 Cassette deck
13 REMOTE SENSOR
14  button
 button
 button
 button
15 TAPE button
16 TUNER button


Names of buttons:
Remote control unit



1 STANDBY/ON  button
2 TAPE button
CD/ button
TUNER button
3  button
 button
4 FOLDER  button


5 Number buttons
6 MUTING button
7 DISPLAY button
8 RANDOM/PRESET – button
REPEAT/PRESET + button
PROGRAM/CLOCK button
9 EQ button
10 VOL  button

GENERAL CONTROLS

STANDBY/ON  - Press to turn on/off the unit.
The display window lights up when the unit is turned on. (Note, however, that the display window does not light even when the unit is turned on if the unit is operated on batteries.)

SETTING THE CLOCK


Before operating the unit any further, first set the clock built in this unit.
The clock uses 12-hour indication. "AM 12:00" indicates midnight, and "PM 12:00" indicates noon.



1 Press STANDBY/ON  to turn off the unit, if it is turned on.

The clock flashes on the display window.


2 Press and hold PROGRAM/CLOCK SET for more than 2 seconds.



The hour digits start flashing.



3 Press  or  to adjust the hour, then press PROGRAM/CLOCK SET.

The minute digits start flashing.

 
 


4 Press  or  to adjust the minutes, then press PROGRAM/CLOCK SET.

Notes:

- If there is a power failure, the clock loses the setting and is reset to "AM 12:00."The clock indication will keep flashing until you set the clock again.
- You can also set the clock when the unit is in STANDBY mode. In this case, follow the procedures from step 2.

ADJUSTING THE SOUND

Press VOLUME UP/DOWN (or VOL  or  on the remote control unit) to increase or decrease the volume to desired level. The volume level can be adjusted in 41 steps from "MIN" to "MAX".


 


• **Turning off the sound temporarily**
During playback, press MUTING on the remote control unit to turn the sound off. "MUTING" appears in the display window. Press it again to restore the sound.

• **Reinforcing the bass sound**
Press HBS so that the HBS indicator appears in the display window. You can enjoy powerful bass sound with the Hyper-Bass Sound effect.

• **Selecting the sound mode**
You can select one of the 5 preset sound modes.
Press PRESET EQ repeatedly until the indicator for the sound mode you want appears in the display window.
ROCK : Powerful sound emphasizing treble and bass.
JAZZ : Accented lower frequencies for jazz-type music.
POP : More presence in the vocals and midrange.
CLASSIC: Enriched sound with fine treble and ample bass.
No indication : Equalizer effect is canceled.

 

USING THE RADIO


TUNING IN RADIO STATIONS

1 Press TUNER to enter the tuner mode.
2 Press TUNER to select the band, FM or AM.
3 Press and hold  or  for more than 1 second.
The unit starts searching and stops when a station of sufficient signal strength is tuned in.
If you press  or  briefly and repeatedly, the frequency changes step by step.

Changing the FM reception mode
When an FM stereo broadcast is hard to receive or noisy, press FM MODE so that the STEREO indicator disappears from the display window.
To restore the stereo effect, press FM MODE again so that the STEREO indicator appears in the display window.


PRESETTING STATIONS

You can preset 24 FM and 16 AM stations.
1 Press TUNER to select the band, FM or AM.
2 Press  or  to tune in the station you want to preset.
3 Press PROGRAM/CLOCK SET.
"— ——" flashes in the display window.



4 Press PRESET UP/REPEAT to select the preset number.
You can use the number buttons on the remote control unit to select the preset number directly.
Example: To select preset number 5, press 5. To select preset number 15, press 1, then 5.
To select preset number 20, press 2, then 0.

Preset number



5 Press PROGRAM/CLOCK SET.

The tuned station in step 2 is stored in the preset number selected in step 4.
Storing a new station on a used number erases the previously stored one.

6 Repeat steps 2 to 5 to preset other stations, using different preset numbers.







Tuning in a preset station

1 Press TUNER to select the band, FM or AM.
2 Press PRESET UP/REPEAT repeatedly until the desired preset number appears.
You can use the number buttons on the remote control unit to select the preset number directly.
Example:
To select preset number 5, press 5.
To select preset number 15, press 1, then 5.
To select preset number 20, press 2, then 0.


Note


If you unplug the AC power cord or if a power failure occurs, the preset stations will be erased in a few days. If this happens, preset the stations again.


USING THE TAPE





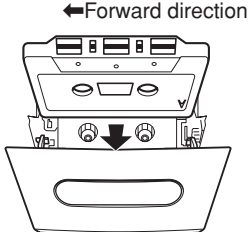

PAUSE STOP/EJECT FF REW PLAY REC

 


 
PAUSE  – Press to interrupt tape play or record mode. Press a second time to resume tape play or tape record mode.

STOP/EJECT  – Press to stop the current tape activity, or to open the cassette compartment door when no buttons are active.



FF  – In stop mode, press to advance the tape toward the end. (When the tape reaches the end, press STOP/EJECT  to release the depressed button.)

REW  – In stop mode, press to rewind the tape toward the beginning. (When the tape reaches the end, press STOP/EJECT  to release the depressed button.)



PLAY  – Press to play cassettes.

  


REC  – Press to record from the radio or CD player.


PLAYING A CASSETTE TAPE

1. Press TAPE to enter the tape mode.
2. Press STOP/EJECT  to open the cassette compartment door.
3. Load a cassette. Use only a type-I normal tape.
4. Close the door securely.
5. Press PLAY  to begin playing the tape. The cassette tape plays until it reaches the end of the side, then it automatically stops.

Fast-winding a tape

Press REW  or FF .

When the tape reaches the end, press STOP/EJECT  to release REW  or FF .

 EN

© 2005 Victor Company of Japan, Limited

1105KMMBICMTS

RECORDING ON CASSETTE TAPES

You can record from the radio or the CD player.


- **It should be noted that it may be unlawful to re-record pre-recorded tapes, records, or discs without the consent of the owner of copyright in the sound or video recording, broadcast or cable program and in any literary, dramatic, musical, or artistic work embodied therein.**
- The recording level is automatically set correctly, so it is not affected by the other sound settings. Thus, during recording you can adjust the sound you are actually listening to without affecting the recording level.
- If recordings you have made have excessive noise or static, the unit may be too close to a TV. Increase the distance between the TV and the unit.
- You can only use type I tape for recording.
- DO NOT turn off the unit while playing back or recording a tape. The cassette deck or tapes may be damaged.
- DO NOT use type II and type IV tapes since the unit is not compatible with such tapes.
- The use of C-120 or longer tape is not recommended, since characteristic deterioration may occur and this tape easily jams in the pinch rollers and the capstans.

To protect your recordings

Cassettes have two small tabs on the back to protect against unexpected erasure or re-recording.

To protect your recording, remove these tabs.

To re-record on a protected tape, cover the holes with adhesive tape.

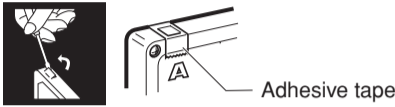

RECORDING FROM THE RADIO

1. Insert a cassette tape into the cassette deck and close the door.
2. Press TUNER and select a radio station.
3. Press REC ● to begin recording. REC ● and PLAY ◀ are locked down.
4. Press STOP/EJECT ■/▲ to stop recording.

Using the beat-cut function

When recording an AM broadcast, beats may occur. If this happens while recording an AM broadcast, switch the BEAT CUT switch on the rear of the unit to “1” or “2” (MONO).

TIP

To temporarily pause the recording, press PAUSE || on the cassette deck. Press PAUSE || again to resume recording.

SYNCHRONIZED RECORDING FROM A CD

1. Insert a cassette tape into the cassette deck and close the door.
2. Press ►/II (or CD/►/II on the remote control unit).
3. Place a CD you want to record into CD compartment.
4. Select the track you want to record by pressing ◀◀ or ►►.
5. Press REC ● to start synchronized recording.

- When the tape reaches the end, the CD playback enters in pause.
 - To continue recording: turn over the tape and press REC ●.
 - To continue the CD playback: press ►/II.
 - To stop the CD playback: press ■.
- When the CD playback stops, the cassette tape continues running.
 - To stop the cassette tape, press STOP/EJECT ■/▲.

TIP

Using the PAUSE || button on the cassette deck instead of the STOP/EJECT ■/▲ button to momentarily interrupt recording gives you a much clearer sound recording.

ERASING

When recording on a pre-recorded tape, the previous recording is erased and only the new recording is heard next time the tape is played back.

Erasing a recording on a tape without making a new recording

1. Press TAPE to enter the tape mode.
2. Press REC ● to start recording.

USING THE CD

THINGS TO KNOW BEFORE PLAYING CDs

Playable CDs:

Only CDs bearing these marks can be used with this system.



This unit has been designed only to play back the following CDs.

- Digital audio CD
- Recordable digital audio CD (CD-R)
- Rewritable digital audio CD (CD-RW)

When playing a CD-R or CD-RW

You can play back **finalized CD-R or CD-RW** recorded in **music CD format** or in **MP3 format**. (If a CD-RW has been recorded in a different format, erase all the data on the CD-RW completely before recording on it.)


- You can play back CD-R or CD-RW like an audio CD.
- Some CD-R or CD-RW may not be played back on this unit because of their disc characteristics, damage or stain on them, or if the player lens is dirty.
- The reflection factor of CD-RW is lower than that of other CDs, possibly causing CD-RW to take longer time to read.

Notes for MP3 files

- The unit can only recognize files with “MP3” or “mp3” as the extensions, which can be in any combination of upper and lower cases. The file name can contain up to 30 characters.
- This unit recognizes maximum number of 511 folders and files on a disc.
- It is recommended that you record your material at a 44.1-kHz sampling rate, using the 128-kbps data transfer rate.
- Some MP3 files or discs may not be played back because of their characteristics or recording conditions.
- MP3 discs require a longer readout time than normal discs because of the complexity of the folder/file configuration.
- MP3i and MP3 Pro are not available.
- The title, artist name and album name can be displayed as the ID3 TAG V1 and V2 information.


Caution for DualDisc playback

The Non-DVD side of a “DualDisc” does not comply with the “Compact Disc Digital Audio” standard. Therefore, the use of Non-DVD side of a DualDisc on this product may not be recommended.

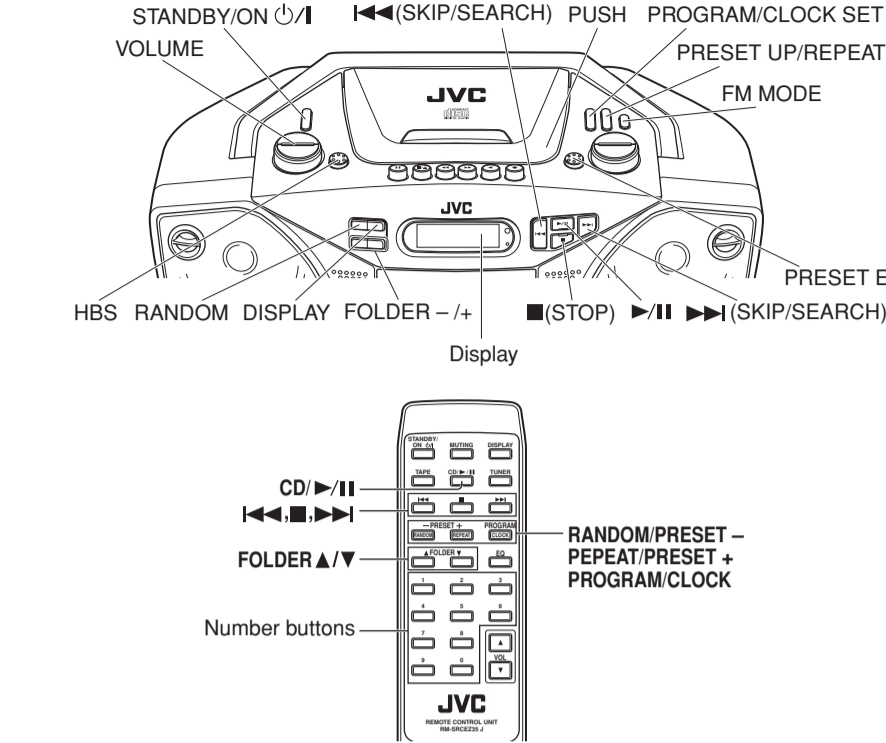

LOADING A CD

1. Press ►/II (or CD/►/II on the remote control unit); “READING” appears, then “NO DISC” appears in the display if no CD is loaded.
2. Press △ PUSH to open the CD door.
3. Place a CD into the tray with the label facing up.
4. Close the CD door. Then the total number of tracks and total playing time appear.
5. To remove the CD, press △ PUSH, grasp the CD by its edges, and carefully pull it out.
6. When loading an MP3 disc, the MP3 indicator lights, and the total number of groups (albums) and total number of tracks appear in the display window.

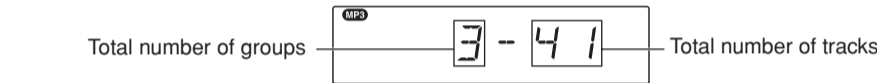

PLAYING A CD

Press ►/II (or CD/►/II on the remote control unit) to play all the tracks in order starting with track 1.

The current track number and elapsed playing time appear in the display.

Note for MP3 files

When an MP3 disc is loaded, it may take more than 30 seconds to be read, depending on the amount of information compiled in the disc.

Notes

- Press ►/II to temporarily stop the CD. The track number and elapsed playing time flash in the display. Press ►/II again to resume playing the CD.
- Adjust VOLUME to a comfortable level.
- Press ■ to stop playing the CD. Wait a few seconds for the CD to stop turning, then press △ PUSH to open the CD door and remove the CD.
- “NO DISC” may appear when the disc is loaded upside down. Reload the disc correctly.
- **Skipping**
 - To skip back to the previous track
 - During playback, press ◀◀ once to return to the beginning of the current track, press twice to skip back to the beginning of the previous track.
 - To skip to the next track
 - During playback, press ►► to skip to the beginning of the next track.

Selecting a desired track directly

Use the number buttons on the remote control unit.

In case of an audio CD:

Example:
To select track 8, press 8.
To select track 21, press 2, then 1.

In case of an MP3 disc (during playback):

Example:
Press FOLDER + or FOLDER – (or FOLDER ▲ or FOLDER ▼ on the remote control unit) to select the desired folder.
To select track 8, press “8”.
To select track 21, press “2”, then “1”.
To select track 115, press “1”, “1”, then “5”.

In case of an MP3 disc (while in stop mode):

Example:
To select track 8 in folder 4,
press “4” for folder number, then “8” for track number.
To select track 21 in folder 15,
press “1” and “5” for folder number, then “2” and “1” for track number.
To select track 115 in folder 4,
press “4” for folder number, then “1”, “1” and “5” for track number .

Playback starts from the specified track.

Note:

When using the number buttons, press the next button within 3 seconds after pressing the previous button. Otherwise the unit recognizes the previously pressed number and starts playback.

Search – locating a desired position on the disc

Press and hold ◀◀ or ►► during playback.

Monitor the sound and release the button when the desired position is located.

Note:

The sound is not produced when searching an MP3 disc.

Selecting a desired track for MP3 discs

- 1 Press FOLDER + or FOLDER – repeatedly in stop mode, until the desired folder number is displayed.
- 2 Press ◀◀ or ►► to select a desired track from the current folder.
- 3 Press ►/II (or CD/►/II on the remote control unit) to start playback.


Note:

During playback, if you press FOLDER + or FOLDER –, playback skips to the first track of the next or previous folder, and the track number is shown in the display window.

Displaying the disc information* (ID3 TAG) (MP3 disc only)

Press DISPLAY on the remote control unit during playback.


Each time you press the button, the display changes in the following order.

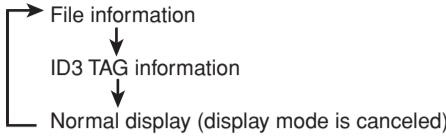

* There may be some cases that the text information is not displayed.

REPEAT

The PRESET UP/REPEAT button (or REPEAT/PRESET + button on the remote control unit) repeats one track (REPEAT), all tracks (REPEAT ALL), or all tracks within a folder (FOLDER REPEAT) (for MP3 only). Each time you press the button, the repeat mode changes in the following order: The following chart illustrates how REPEAT works in various modes.

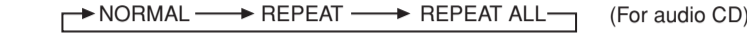

RANDOM

In CD mode, press RANDOM so that “RANDOM” appears in the display.

To quit random play, press RANDOM again.

PROGRAMMING

- 1 Press ►/II to enter CD mode, if the unit is in TUNER or TAPE mode.
 - You can press CD/►/II on the remote control unit to enter CD mode.
- 2 Press PROGRAM/CLOCK SET (or PROGRAM/CLOCK on the remote control unit) in stop mode.
 - The PROGRAM indicator appears in the display window.



- 3 Press ◀◀ or ►► to select a desired track to be programmed.
 - You can use the number buttons on the remote control unit to select a desired track.



- 4 Press PROGRAM/CLOCK SET.
- 5 Repeat steps 3 and 4 to program other tracks.
- 6 Press ►/II.
 - The tracks are played in the order you have programmed.

Stopping programmed playback

Press ■.

Checking the program contents

Before starting programmed playback, press PROGRAM/CLOCK SET when “PROGRAM” is displayed.

Each time you press the button, the programmed tracks are shown in the display window.

Adding tracks in the program

- 1 Press PROGRAM/CLOCK SET repeatedly until “– – –” appears as a track number.
- 2 Press ◀◀ or ►► (or the number buttons on the remote control unit) to select a new track number, then press PROGRAM/CLOCK SET.

Editing the program

- 1 Press PROGRAM/CLOCK SET repeatedly until the program number you want to edit appears.
- 2 Press ◀◀ or ►► (or the number buttons on the remote control unit) to select a new track number, then press PROGRAM/CLOCK SET.

Erasing the entire program in the memory

Press PROGRAM/CLOCK SET so that the “PROGRAM” appears, and press ■ while the “PROGRAM” is displayed.
The program is also cleared when you open the CD door, turn off the unit or change to other audio sources.

Note

You cannot program more than 32 tracks.

“FULL” is displayed.

For MP3 disc:

- 1 Press PROGRAM/CLOCK SET in stop mode.
 - The PROGRAM indicator appears in the display window.
- 2 Press FOLDER + or FOLDER – to select a desired folder.
 - The first track number in the selected folder is shown.
- 3 Press ◀◀ or ►► to select a desired track in the folder.
- 4 Press PROGRAM/CLOCK SET.
- 5 Repeat steps 2 to 4 to program other tracks.
- 6 Press ►/II.
 - The tracks are played in the order you have programmed.

CARE AND MAINTENANCE

CLEANING THE EXTERIOR

- Disconnect the system from AC power before cleaning the exterior of the unit with a soft dry cloth.

HANDLING DISCS



- Remove the disc from its case by holding it at the edge while pressing the center hole lightly.
- Do not touch the shiny surface of the disc, or bend the disc.
- Put the disc back in its case after use to prevent warping.

- Be careful not to scratch the surface of the disc when placing it back in its case.
- Avoid exposure to direct sunlight, temperature extremes, and moisture.

To clean the disc

- Wipe the disc with a soft cloth in a straight line from center to edge.
- DO NOT use any solvent-such as conventional record cleaner, spray, thinner, or benzine-to clean the disc.

HANDLING CASSETTE TAPES



- If the tape is loose in its cassette, take up the slack by inserting a pencil in one of the reels and rotating.
- If the tape is loose, it may get stretched, cut, or caught in the cassette.




- Be careful not to touch the tape surface.



- Avoid storing tapes in any of the following places:
 - In dusty places
 - In direct sunlight or heat
 - In moist areas
 - On a TV or speaker
 - Near a magnet

CLEANING THE TAPE HEADS

Clean the heads after every 10 hours of use with a wet-type head cleaning tape (available at electronic and audio shops).

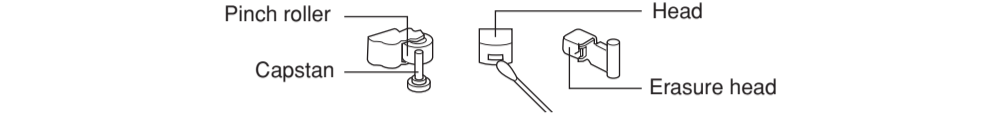


TROUBLESHOOTING TIPS

Problem	Solution
System does not turn on.	<ul style="list-style-type: none">• Make sure the power cord is securely plugged into the AC power outlet (or that the batteries are fresh).• Unplug the unit for a moment, and then plug it back in again.• Check the outlet by plugging in another device.
No sound	<ul style="list-style-type: none">• Adjust the volume setting.• Make sure you have selected the correct function: CD, TAPE, or TUNER and the headphones are disconnected.
Poor radio reception	<ul style="list-style-type: none">• Adjust the FM telescopic antenna for better FM reception.• Rotate the unit to achieve better AM reception.• Try turning off electrical appliances near the unit, such as TV, hair dryers, vacuum cleaners, or fluorescent lights.
CD does not play.	<ul style="list-style-type: none">• Make sure the tray contains a CD.• Make sure the CD's label is facing up.• Make sure that pause mode is not activated.• Make sure the CD function is selected.
CD sound skips.	<ul style="list-style-type: none">• Clean the CD (as explained in “CARE AND MAINTENANCE”).• Check the CD for warping, scratches, or other damage.• Check for vibration or shock that may affect the unit; move system if necessary.
Distorted or noisy recordings	<ul style="list-style-type: none">• Inspect the recording head and clean it if necessary.

Resetting the unit

If “TROUBLESHOOTING” does not eliminate malfunctioning (failure to operate or display properly, etc.), press and hold the RESET button on the rear of the unit for 2 to 3 seconds with something having a sharp point, while the AC power cord is plugged off and the batteries are removed from the unit if inserted.

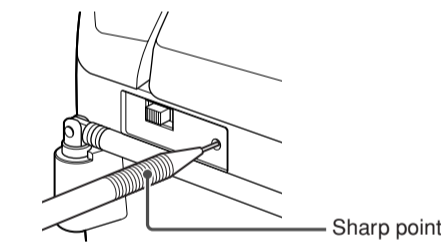

Note:

Resetting causes the unit to restore its factory default settings and results in all the settings made by the user being deleted.

SPECIFICATIONS

Compact disc player section

Type	: Compact disc player
Signal detection	: Non-contact optical pick-up (semiconductor laser)
Number of channels	: 2 channels

Radio section

Frequency ranges	: FM 87.5 MHz - 108.0 MHz : AM 520 kHz - 1 710 kHz
Antennas	: Telescopic antenna for FM : Ferrite core antenna for AM

Cassette deck section

Track	: 4-track 2-channel stereo
Motor	: Electronic governor DC motor for capstan
Heads	: Hard permalloy head for recording/playback, magnetic head for erase
Fast wind time	: Approx. 120 sec. (C-60 cassette)

General

Speaker	: 10 cm × 2 (4 Ω, 3 W)
Power output	: 2 W per channel, min. RMS, driven into 4 Ω at 1 kHz with no more than 10 % total harmonic distortion
Output terminals	: PHONES × 1 (Ø 3.5 mm, stereo)
Power supply	: AC 120 V ~, 60 Hz : DC 12 V (“R20/D (13F)” cells × 8)
Power consumption	: 17 W (at operation) : 1.5 W (at standby)
Dimentions	: 435 mm (W) × 156 mm (H) × 241 mm (D) (17 3/16 in × 6 3/16 in × 9 1/12 in)
Mass	: Approx. 2.8 kg (6.2 lbs) (without batteries)
Accessories provided	: AC power cord × 1 : Remote control unit × 1


Design and specifications are subject to change without notice.

JVC

CD PORTABLE SYSTEM

RC-EZ31B

ENGLISH

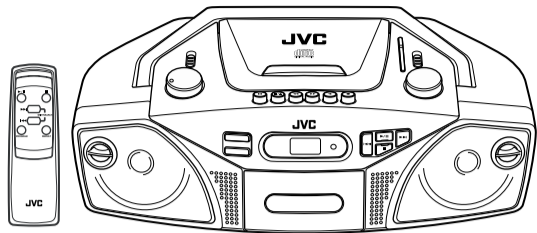

INSTRUCTIONS

Thank you for purchasing this JVC product.

Please read these instructions carefully before starting operation to be sure to obtain optimum performance and a longer service life from the unit.

601-EZ3100-040
LVT1524-004C
[J/C]

SAFETY PRECAUTIONS



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

For U.S.A.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modification not approved by JVC could void the user's authority to operate this equipment.

For Canada:

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

Caution — OFF switch!

Disconnect the mains plug to shut the power off completely. The switch in any position does not disconnect the mains line.

CAUTION

To reduce the risk of electrical shocks, fire, etc.:

- Do not remove screws, covers or cabinet.
- Do not expose this appliance to rain or moisture.
- To disconnect power from the mains, pull out the mains plug. When installing the product, ensure that the plug is easily accessible.

IMPORTANT FOR LASER PRODUCTS

- CLASS 1 LASER PRODUCT
- CAUTION:** Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
- CAUTION:** Do not open the top cover. There are no user serviceable parts inside the Unit; leave all servicing to qualified service personnel.

GETTING STARTED

POWER SUPPLY

This CD portable system operates on battery or AC power.

BATTERY POWER

Insert eight D-sized alkaline batteries (not supplied) and you can take your system just about anywhere. Open the battery compartment cover on the back of the unit by pressing down the two tabs. Insert batteries as marked on the unit.

Important battery information

- If you are not going to use the unit for a month or more, be sure to remove batteries because they can leak and cause damage.
- Dispose of batteries in the proper manner, according to federal, state, and local regulations.
- Discard leaky batteries immediately. Leaking batteries can cause skin burns or other personal injury.

AC POWER

Plug the AC power cord into the AC IN ~ jack on the back of the unit, and into an AC power outlet.

For Your Safety

The AC power plug is polarized (one blade is wider than the other) and only fits into AC power outlets one way. If the plug will not go into the outlet completely, turn the plug over and try to insert it the other way. If it will not still fit, contact a qualified electrician to change the outlet, or use a different one. Do not attempt to bypass this safety feature.

CAUTIONS:

- ONLY USE JVC POWER CORD PROVIDED WITH THIS UNIT TO AVOID MALFUNCTION OR DAMAGE TO THE UNIT. REMOVE BATTERIES WHEN USING THE POWER CORD.**
- BE SURE TO UNPLUG THE POWER CORD FROM THE OUTLET WHEN GOING OUT OR WHEN THE UNIT IS NOT IN USE FOR AN EXTENDED PERIOD OF TIME.**

ANTENNAS

The AM antenna is built in, so adjusting the position of the unit may help AM reception. The FM telescopic antenna on the back of the unit can be extended and rotated for better FM reception.

GENERAL CONTROLS

FUNCTION Switch — Move the switch to select the TUNER, TAPE or CD function.

Move the FUNCTION switch to TAPE / OFF position with no cassette buttons pressed, to turn the unit off.

VOLUME knob — Turn the volume knob to increase or decrease the volume.

USING THE RADIO


TUNING TO A RADIO STATION

- Move the FUNCTION switch to TUNER to turn the radio on.
- Set the BAND switch to FM or AM.
- Tune to a desired station by turning the TUNING wheel knob.
- To turn off the radio, move the FUNCTION switch to TAPE / OFF.


BEAT CUT SWITCH

The BEAT CUT switch is also used for changing the FM reception mode.

- Recording an AM station**
When recording an AM broadcast, beats may occur. If this happens, switch the BEAT CUT switch position to "1" or "2".
- Changing the FM reception mode**
When an FM stereo broadcast is hard to receive or noisy, switch to "2" (MONO). Reception improves.
To restore stereo reception, switch to "1".

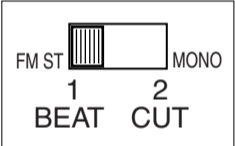

USING THE CASSETTE DECK

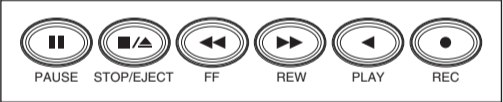

REC — Press to record from the radio or CD player.

PLAY — Press to play a cassette.

REW — In stop mode, press to rewind the tape toward the beginning.

FF — In stop mode, press to advance the tape toward the end.

STOP/EJECT — Press to stop current tape activity, or to open the cassette compartment door when no buttons are active.

PAUSE — Press to interrupt tape play or record mode. Press again to resume tape play or tape record mode.

PLAYING A CASSETTE TAPE

- Move the FUNCTION switch to TAPE / OFF.
- Press STOP/EJECT to open the cassette compartment door.
- Insert a cassette tape into the compartment with the open edge up and the playback side facing out.
- Close the door securely.
- Press REW or FF to move the tape to the desired starting point.
- Press PLAY to begin playing the tape. Playback continues until the tape reaches the end of the side, then automatically stops.

RECORDING ON A CASSETTE TAPE

You can record from the radio or the CD player.

For best recording, use a normal bias tape.

It should be noted that it may be unlawful to re-record pre-recorded tapes, records, or discs without the consent of the owner of copyright in the sound or video recording, broadcast or cable program and in any literary, dramatic, musical, or artistic work embodied therein.


ERASE PROTECTION



When you record new material, the cassette deck records over whatever is on the tape. To protect a tape from accidental erasure, break off one or both plastic tabs (one for each tape side) of the cassette tape. If you decide later to record on the tape, seal the hole with a piece of cellophane tape.

WARNING

A little bit of slack in your tape can cause scratches on the tape, or worse yet, the tape could break. If you notice some slack in the tape, use a pencil to tighten it up before you insert the tape in the cassette compartment.

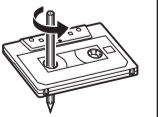

NOTE

Use of tapes longer than 120 minutes is not recommended, since characteristic deterioration may occur and these tapes easily jam in the pinch roller and the capstan.

RECORDING FROM THE RADIO

- Insert a cassette tape into the cassette deck and close the door.
- Move the FUNCTION switch to TUNER and tune to a radio station.
- Press REC to begin recording. REC and PLAY both lock down.
- Press STOP/EJECT to end recording.
- To turn off the radio, slide the FUNCTION switch to TAPE / OFF.

RADIO RECORDING TIPS

To temporarily pause recording, press PAUSE. Press PAUSE again to resume recording.


SYNCHRONIZED RECORDING FROM A CD

- Insert a cassette tape into the cassette deck and close the door.
- Move the FUNCTION switch to CD.
- Insert the CD you want to record into the CD compartment.
- Select the track you want to record by pressing (SKIP/SEARCH) or (SKIP/SEARCH). Then press REC.

TIP

Pressing PAUSE instead of STOP/EJECT to momentarily interrupt recording gives you a much cleaner sound recording.

USING THE CD PLAYER

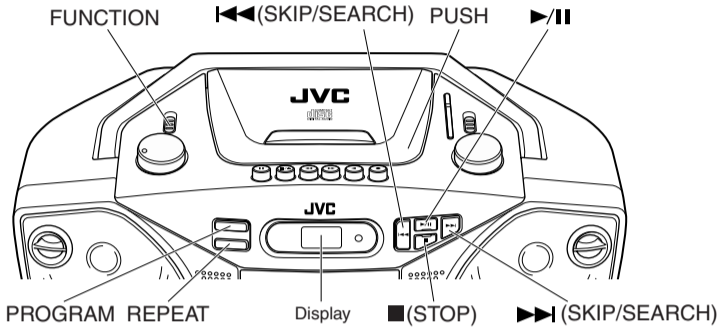

PLAYING A CD

- Set the FUNCTION switch to CD. "—" flashes, and then "00" appears in the display if no disc is loaded.
- Press PUSH to open the CD compartment cover.
- Place a CD with the label side facing up.
- Close the CD compartment cover. The total number of tracks on the disc appears in the display.
- Press PAUSE. Playback starts from track 1. The current track number appears in the display.

To pause playback, press PAUSE. "—" flashes in the display. Press PAUSE again to resume playback.

To stop playback, press STOP. Wait a few seconds for the disc to stop turning completely, and then remove the disc.

To remove the disc, open the CD compartment cover, and carefully pull it out.

SKIP

The skip function lets you quickly locate the beginning of any track on the CD, including the track currently being played.

During playback:

- Press (SKIP/SEARCH) once to return to the beginning of the current track.
- Press (SKIP/SEARCH) twice in rapid succession to return to the beginning of the previous track.
- Press (SKIP/SEARCH) to skip to the beginning of the next track.

In stop mode:

Press (SKIP/SEARCH) or (SKIP/SEARCH) repeatedly until the display shows the desired track number, and then press PAUSE. Playback starts from the selected track.

SEARCH

- During playback, press and hold (SKIP/SEARCH) to move forward through a disc at high speed.
- During playback, press and hold (SKIP/SEARCH) to move back through a disc at high speed.

REPEAT PLAY

The REPEAT button allows you to play the current track, all the tracks on the CD or the entire program repeatedly. Each time you press REPEAT, check the display to see which choice you have selected.

- When "REP" flashes in the display:**
The current track is played repeatedly.
- When "REP" lights up continuously in the display:**
All the tracks on the CD or the entire program are played repeatedly.

PROGRAM PLAY

- In stop mode, press PROGRAM to enter program create mode. "P" and "01" start flashing in the display.
- Press (SKIP/SEARCH) or (SKIP/SEARCH) to select a track number.
- Press PROGRAM to store the selected track number in the program.
- Repeat steps 2 and 3.
You can store up to 20 tracks in the program. If you select more than 20 tracks, programmed tracks are overwritten from the first track.
- Press PAUSE to start program play.

To confirm the order of programmed tracks, press PROGRAM in stop mode.

To clear the program, press STOP in stop mode. "P" disappears from the display.

PLAYING A CD-R OR CD-RW

- User-edited CD-Rs (Recordable) and CD-RWs (Rewritable) can be played only if they are already "finalized."
- You can play your original CD-Rs or CD-RWs recorded in music CD format. (However, they may not be played depending on their characteristics or recording conditions.)
- Before playing CD-Rs or CD-RWs, read their instructions and cautions carefully.
- Some CD-Rs and CD-RWs may not be played on this unit because of their disc characteristics, damage or stain on them, or if the player's lens is dirty.
- CD-RWs may require a longer readout time. (This is caused by the fact that the reflectance of CD-RWs is lower than that of regular CDs.)

Caution for DualDisc playback

The Non-DVD side of a "DualDisc" does not comply with the "Compact Disc Digital Audio" standard. Therefore, the use of Non-DVD side of a DualDisc on this product may not be recommended.

CARE AND MAINTENANCE

CLEANING THE EXTERIOR

Disconnect the unit from AC power before cleaning the exterior of the unit with a soft dust cloth.

HANDLING CDS

- Do not touch the signal surfaces. Hold by the edges, or by one edge and the hole.
- Do not affix labels or adhesive tape to the label surfaces. Also, do not scratch or damage the label.
- Discs rotate at high speed inside the player. Do not use damaged (cracked or warped) discs.

CLEANING CDS

- Dirty discs can cause sound-skip. Always keep discs clean by wiping them gently with a soft cloth from the inner edge toward the outer perimeter.
- If a disc becomes dirty, wet a soft cloth in water, wring it out well, wipe the dirt away gently, and then remove any water drops with a dry cloth.
- Do not use record cleaning sprays or antistatic agents on discs. Also, never clean discs with benzene, thinner, or other volatile solvents which may cause damage to the disc surface.

TAPE CARE


- Do not expose tapes to sunlight or store them in hot places. High temperatures may warp the shell or damage the tape itself.
- Keep cassettes in their boxes when not in use.
- Cassette tapes can be erased by magnetic fields produced by magnets, electric motors, electrical transformers, and other devices. Keep tapes away from magnets and magnetic fields.

CLEANING THE TAPE HEADS

Iron oxide particles from the magnetic tape build up on the parts that come in contact with the tape. These deposits can cause incomplete erasure, muffled playback sound, and might prevent automatic stop. To clean the cassette deck, open the cassette compartment door, push the PLAY button and gently clean the heads, capstan, and pinch roller with a head cleaner. Always unplug the AC power cord before cleaning, and allow 30 minutes drying time after using a liquid cleaner. Clean the heads after every 25 hours of use.

- Never use any metal objects on or near the tape heads.
- Do not allow any cleaning material to fall into the tape assembly.

REMOTE CONTROL UNIT

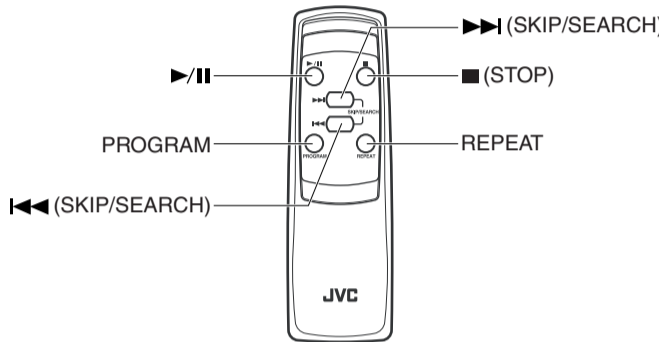

TROUBLESHOOTING TIPS

Problem	Solution
The unit doesn't turn on	<ul style="list-style-type: none">Make sure the AC power cord is securely plugged into an AC power outlet (or that the batteries are fresh).Unplug the unit for a moment, and then plug it back in again.Check the outlet by plugging in another device.
No sound	<ul style="list-style-type: none">Adjust the volume setting.Make sure you have selected the correct function: CD, TAPE, or TUNER, and headphones are disconnected.
Poor radio reception	<ul style="list-style-type: none">Adjust the FM telescopic antenna for better FM reception.Rotate the unit to achieve better AM reception.Try turning off electrical appliances near the unit, such as TV, hair dryers, vacuum cleaners, or fluorescent lights.
CD doesn't play	<ul style="list-style-type: none">Make sure the tray contains a CD.Make sure the CD's label is facing up.Make sure that pause mode is not activated.Make sure the CD function is selected.
CD sound skips	<ul style="list-style-type: none">Clean the CD (as explained in "CARE AND MAINTENANCE").Check the CD for warping, scratches, or other damage.Check for vibration or shock that may affect the unit; move the unit if necessary.
Distorted or noisy recordings	<ul style="list-style-type: none">Inspect the recording head and clean it if necessary.

SPECIFICATION

Compact disc player section

Type	: Compact disc player
Signal detection	: Non-contact optical pick-up (semiconductor laser)
Number of channels	: 2 channels

Radio section

Frequency ranges	: FM 88 MHz - 108 MHz : AM 530 kHz - 1 700 kHz
Antennas	: Telescopic antenna for FM : Ferrite core antenna for AM

Cassette deck section

Track	: 4-track 2-channel stereo
Motor	: Electronic governor DC motor for capstan
Heads	: Hard permalloy head for recording/playback, magnetic head for erase
Fast wind time	: Approx. 120 sec. (C-60 cassette)

General

Speaker	: 10 cm x 2 (4 Ω, 3 W)
Power output	: 2 W per channel, min. RMS, driven into 4 Ω at 1 kHz with no more than 10 % total harmonic distortion
Output terminals	: PHONES x 1 (Ø 3.5 mm, stereo)
Power supply	: AC 120 V ~, 60 Hz : DC 12 V ("R20/D (13F)" cells x 8)
Power consumption	: 17 W (at operation) : 1.5 W (at standby)
Dimensions	: 435 mm (W) x 156 mm (H) x 241 mm (D) (17 3/16 in x 6 3/16 in x 9 1/2 in)
Mass	: Approx. 2.8 kg (6.2 lbs) (without batteries)
Accessories provided	: AC power cord x 1 : Remote control unit x 1

Design and specifications are subject to change without notice.